

User Manual

Pen Video/Audio Recorder



ATTENTION

The record button is sensitive. To prevent damage to the Pen, please press the button gently when using. Improper use of the Pen may void the warranty

Setting the Correct Time

1. Create a new text file and name it userconfig.txt.
2. Enter the correct time using the format below:

YYYY-MM-DD HH:MM:SS

3. Save the file and copy it to the DVR Pen.
4. Press the record button. The date will automatically reset in the pen's memory.

Charging the DVR Pen

The DVR pen can be charged by using the provided adaptor, or by connecting the pen to a USB port on your Computer. During the charging process, the LED indicator will blink YELLOW. When the DVR pen is fully charged the indicator will stop blinking.



Note: For the first five charges, it is recommended to completely run the battery down before the next charging session.

ATTENTION

The record button is sensitive. To prevent damage to the Pen, please press the button gently when using. Improper use of the Pen may void the warranty

Turning On the DVR Pen


Gently press the record button. The LED light will turn YELLOW indicating the DVR pen is preparing to record.

IMPORTANT: While the LED indicator is YELLOW (in boot up mode), do not press the top button or perform any other operations until the LED indicator turns BLUE (recording mode).

Recording a Video

After the DVR Pen boots up, the LED indicator will automatically turn from YELLOW to BLUE. When the LED indicator is BLUE, the DVR Pen is recording.

Note: For best results, record under well-lighted conditions and from a distance of at least 20 inches.

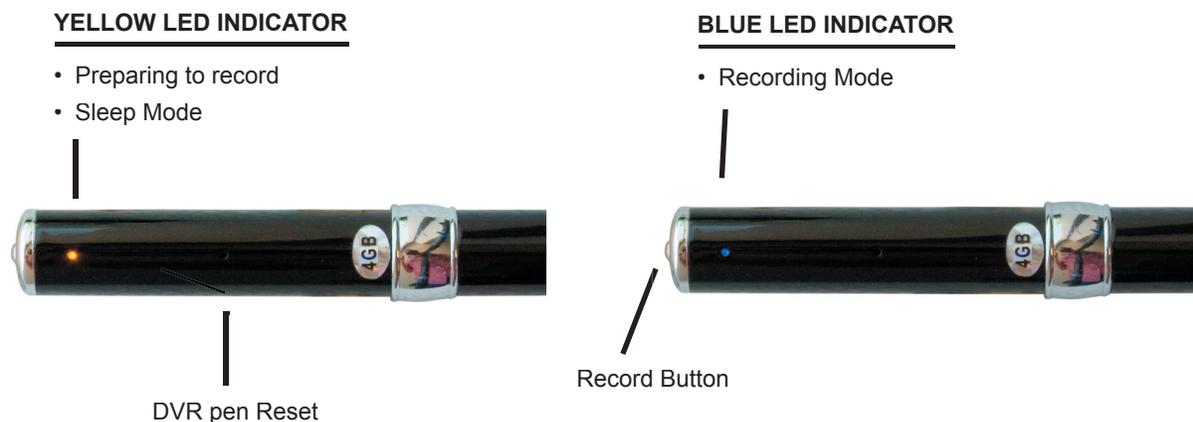

ATTENTION

The record button is sensitive. To prevent damage to the Pen, please press the button gently when using. Improper use of the Pen may void the warranty

Stopping the Recording

To stop recording, gently press the top button again. The LED indicator will turn from BLUE to YELLOW and go into standby mode.

To continue recording while the DVR pen is in standby mode, press the record button. The LED light will turn back to BLUE, indicating the DVR pen is recording.

IMPORTANT: Do not turn off or repress the top button until the LED indicator turns YELLOW. Doing so may prevent the video from being saved to the DVR Pen correctly.

Turning Off the DVR Pen

Gently hold down the top button for several seconds until the LED indicator light turns off. If the DVR pen is not manually shut off, it will automatically power down after 1 minute of non-usage.

Connecting the DVR Pen to your Computer

Before connecting the DVR Pen to your PC, make sure the pen is either turned off, or the LED indicator is YELLOW. The recorded videos should be located in the MOVIE/RECORD folder.

Reset Button

Should the device not work properly, for example it will not turn off or on, a reset may need to be performed. Stick the end of a paper clip in the reset hole and press gently until a small click is felt. The unit should now be reset and ready for use.

Playing the DVR Pen Videos in the Windows Media Player

1. Click on the ffdshow-20020617.exe file, located on the CD, to launch the ffdshow install program.
2. Follow the directions on the screen until installation is complete.
3. Launch the ffdshow video decoder configuration program by going to Start/Programs/ffdshow/Configuration.
4. In the Supported codec section, select H.263+.
5. It is also recommended to select Postprocessing, Picture properties, Offset, Blur, Sharpen, Noise, Subtitles, and Aspect & crop Miscellaneous.
6. Click Apply to finish the configuration.
7. Once installed and configured, you should now be able to view your pen camera Videos using the Windows Media Player.

ffdshow configuration settings

